


NYLON FRAME WINDOW ANCHOR

The Nylon Frame Anchors for window and door frames. For fixing of plastic, wood, aluminum window and door frames to concrete, brick, hollow blocks and perforated brick. Yellow zinc plated steel screw with special pozi. Drive head adapted to receive push-in caps of various colors.



Code No.	Anchor Size	Drill \varnothing	Sleeve Length	Machine Screw	Max Fixture Thickness	Min Hole Depth	Qty(pcs) Box / Ctn
91A08075	8 x 75	8	75	M5 x 80	25	50	100 / 1600
91A08100	8 x 100	8	100	M5 x 110	60	50	100 / 1200
91A08120	8 x 120	8	120	M5 x 130	80	50	100 / 800
91A08140	8 x 140	8	140	M5 x 150	100	50	100 / 800
91A10075	10 x 75	10	75	M6 x 80	25	60	100 / 1200
91A10100	10 x 100	10	100	M6 x 110	50	60	100 / 600
91A10120	10 x 120	10	120	M6 x 130	70	60	100 / 600
91A10140	10 x 140	10	140	M6 x 150	90	60	100 / 600
91A10160	10 x 160	10	160	M6 x 170	110	60	100 / 600

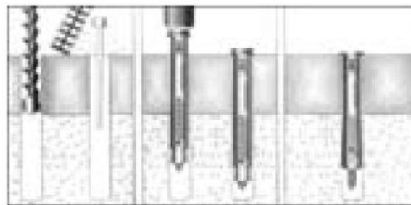

INSTALLATION:

- 1 Drill a hole and clean the hole
- 2 Tap anchor home until sleeve is flush with frame
- 3 Tighten with screwdriver
- 4 To adjust position of frame relax screw, reposition and tighten
- 5 Clip on cover caps